








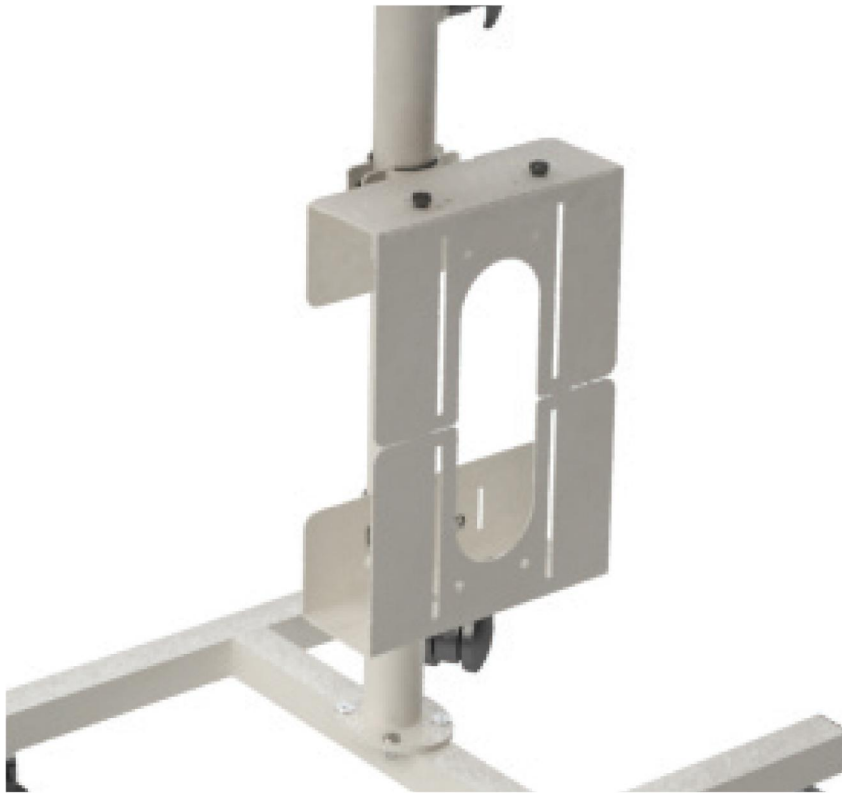


Deluxe CPU Holder - DCPU

Assembly Instructions



How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.

10 -32 Carriage Bolt	20mm Furniture Bolt	3/8 - 1/6 x 1" Socket Head Bolt	L Panels	
				
Qty:4	Qty:8	Qty:4	Qty:2	
12 SS Washer	10/32 Thumb Nut	CPU Holder Mount Bracket	Clamp	1" 7/8 Velcro Pads 2 Velcro Loops 2Velcro Hooks
				
Qty:4	Qty:4	Qty:2	Qty:2	Qty:4
Additional Tools Required			Slotted Screw Driver (Optional)	3/4" Wrench
				

DCPU Holder Configurations

There are three possible configurations.



NOTE: L pieces are shown in two colors to help you differentiate their placement.




Short Side Setup:
CPU width is 1.3" to 4"



Long Side Setup:
CPU width is 4" to 6"

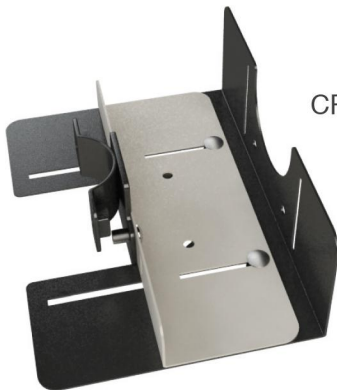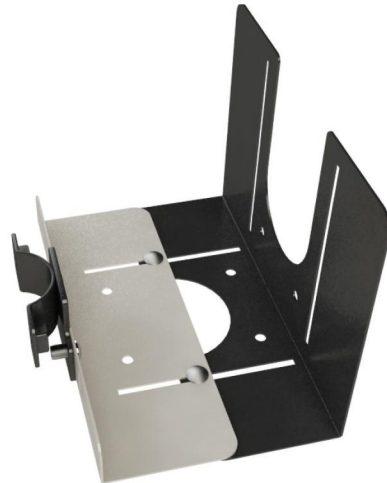

Longest Side Setup:
CPU width is 6" to 11.250"

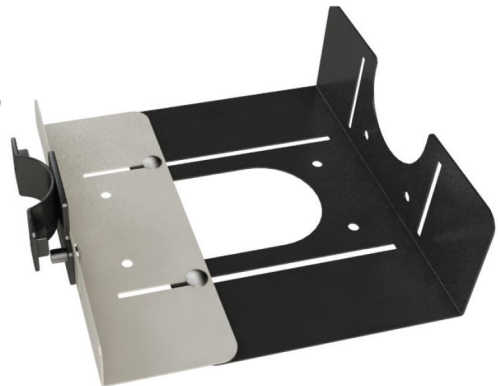

Step 1


Attach CPU Bracket to the required L Panel.

Use (4) 20mm Furniture Bolts.


20mm Furniture Bolt



Qty:4

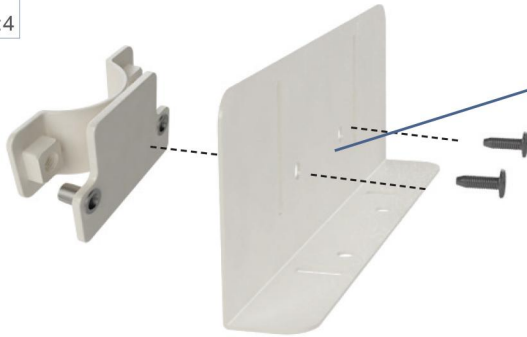

20mm Furniture Bolt

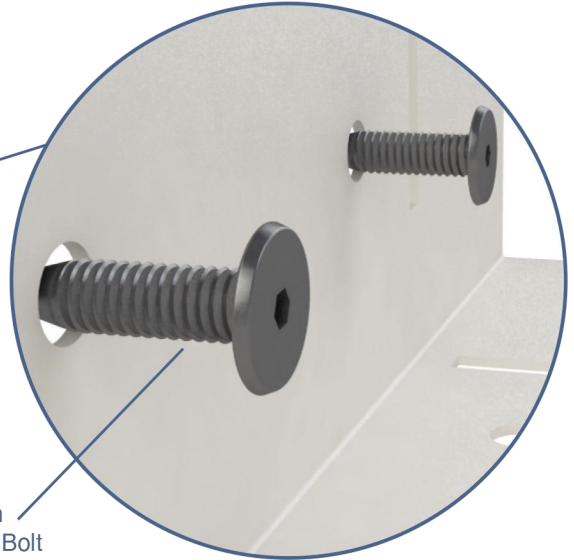

Step 2

Secure Second L Panel.

Use (4) 10-32 x 3/8 Carriage Bolts, (4) 10/32 Thumb Nuts and (4) 12 SS Washers.

10/32 x 3/8 Carriage Bolt



Qty:4

10/32 Thumb Nut




Qty:4

12 SS Washer




Qty:4

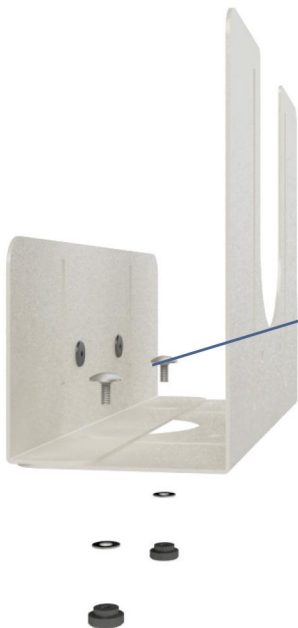

10/32 x 3/8 Carriage Bolt

10/32 Thumb Nut

10/32 Thumb Nut

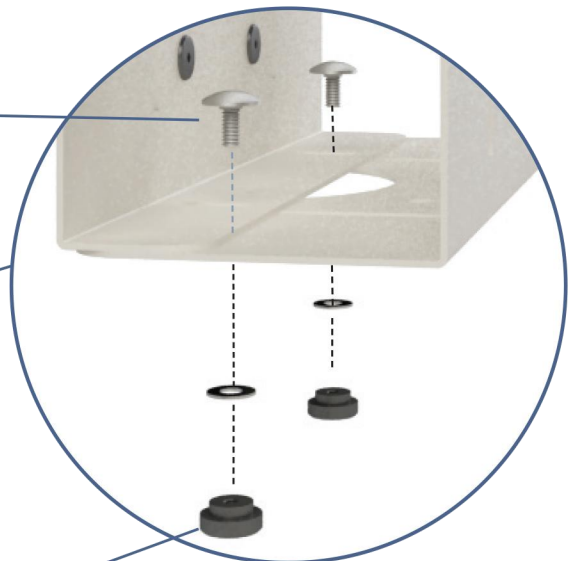

Step 3

Attach CPU Holder At the desired Height.

Use (4) Clamps and (4) 3/8 1/6 x 1" Socket Head Bolts.

Clamp




Qty:4

3/8 1/6 x 1"

Socket Head Bolt



Qty:4

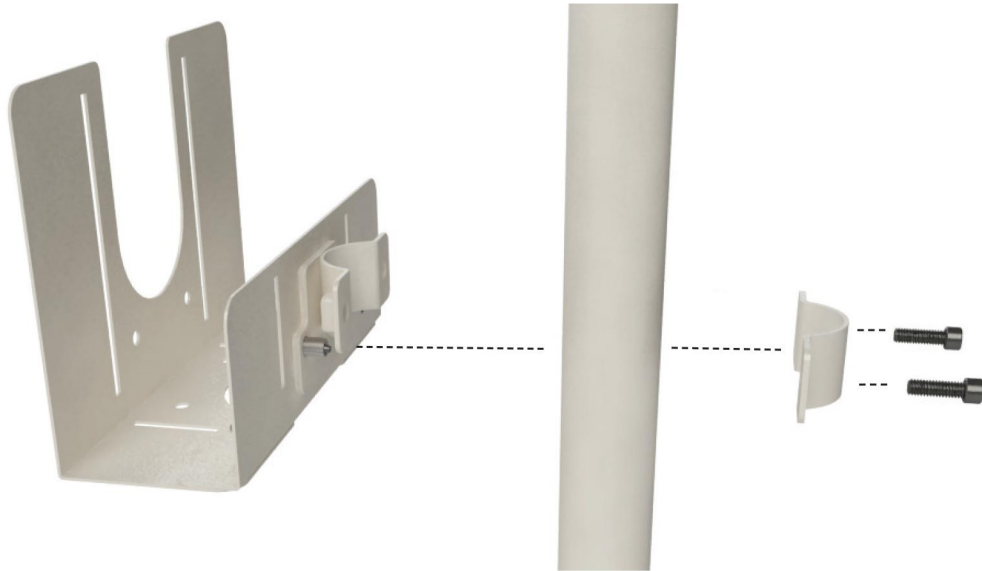

Step 4

Attach Velcro Pads to both your CPU and CPU Holder.

Once in place, adjust Holder and tighten Thumb Nuts to keep CPU secure.

Velcro Pads



Qty:4



Velcro Pads

How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.